

Measuring & Fitting Instructions.

Twist Fit Roller Blinds.


MAKE MY
BLINDS

1. Measuring Instructions.


Discover the versatility, functionality, and affordability of our twist fit roller blinds, the perfect solution for enhancing your home. With our made-to-measure blinds, there's no need for trimming at home – we ensure a seamless fit. Our user-friendly step-by-step guide simplifies the process of measuring for these blinds, allowing you to achieve a perfect fit effortlessly, all without the hassle of drilling holes. Elevate your living space with the convenience and style of our no drill roller blinds.

Note: Twist Fit Roller blinds are only suitable for **inside the recess fit**


What you'll need:

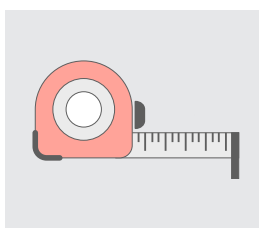

Metal Tape Measure

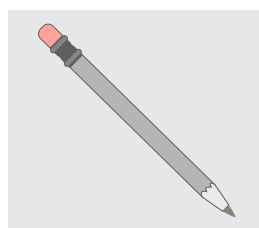


Pencil

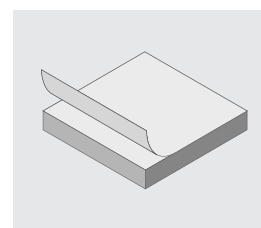

Notepad


Step 1

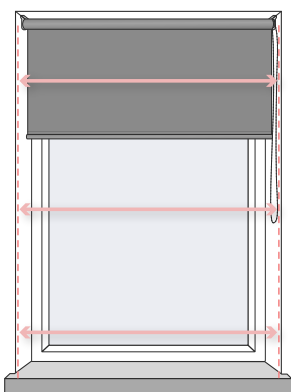

Measure the Width

Measure the width of your window recess in three places (top, middle and bottom). Use the smallest measurement as your width.

Step 2

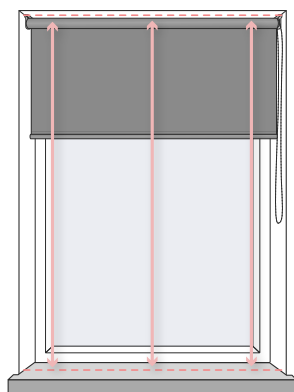

Measure the Drop

Measure the drop of your window recess in 3 places (top, middle and bottom). Use the smallest measurement as your drop.

Step 3

← Enter your WIDTH ↓ Enter your DROP

min 35.0 cm min 35.0 cm

SIZING


Recess Exact

Enter your Measurements

Go to your chosen product on our site, enter your width and drop measurements and follow the remaining steps to customise your twist fit roller blind.




Important checks:

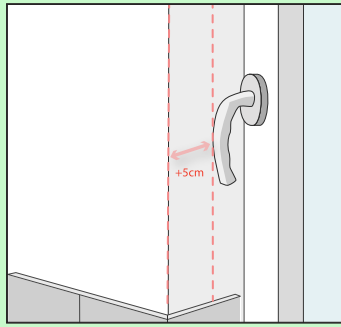

Check your recess depth

Ensure you have at least 5cm clearance between the edge of any obstruction and the front of your window recess.

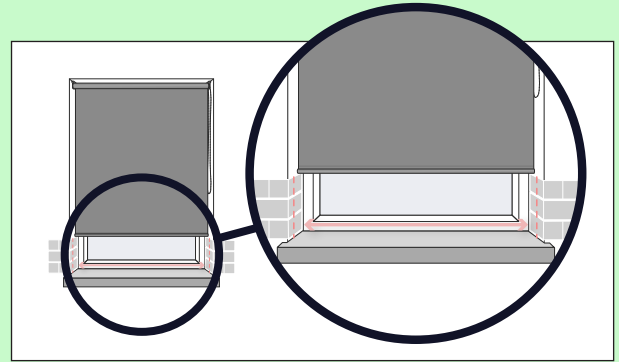

Width obstruction check


If you have any obstruction within your recess such as tiles, measure between these two points and use this as your width measurement. If the difference between this measurement and the top of your recess is less than 25mm you can use the measurement at the top of your recess.

2. Fitting Instructions.

Effortlessly install your twist fit roller blind using our quick and easy-to-follow guide. With no drilling required, you can have your new blinds set up within minutes. Should you require any assistance during the process, feel free to reach out to our expert customer support team via phone or initiate a live chat for prompt guidance.


Step 1

Angle the blind and insert it into the recess, then push the tightener against the wall

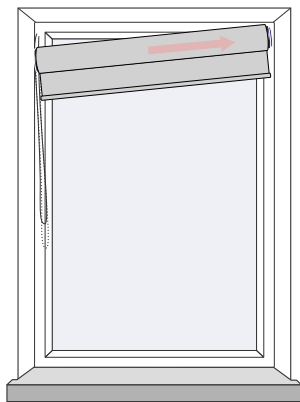

Step 2

Raise the control end of the blind to achieve a level position and release the pressure. The blind will hold itself in place.

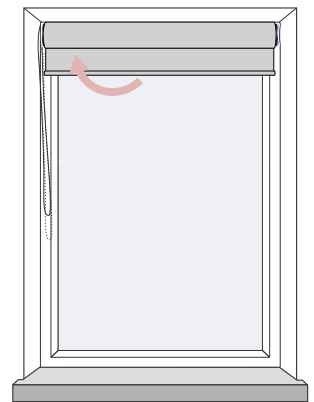

Top Tip!


Ensure the blind is straight and level before securing it in place by making any necessary adjustments to its position.

Step 3


Secure the blind firmly and rotate the tightening wheel to ensure a tight fit. If the tightener is positioned on the left side, turn it towards you; if it's on the right, turn it away from you.

Top Tip!

Ensure the wheel is tightened to its maximum extent to maintain the blind's security and prevent slippage. If you encounter the 'foot' of the mechanism spinning while tightening, remove the blind from the window, tighten it slightly, reinsert it, and attempt the process again.

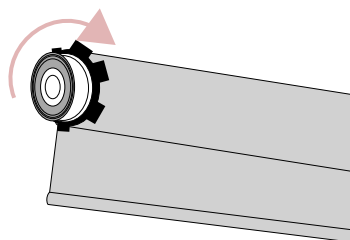


Tightener on the left

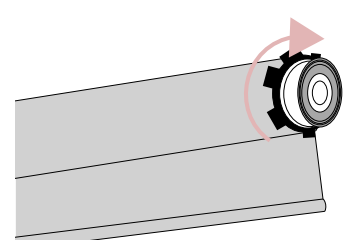

Tightener on the right

! Child Safety

Our twist fit roller blinds are designed to be child safe with an easy break chain connector to prevent choking and strangulation for kids.

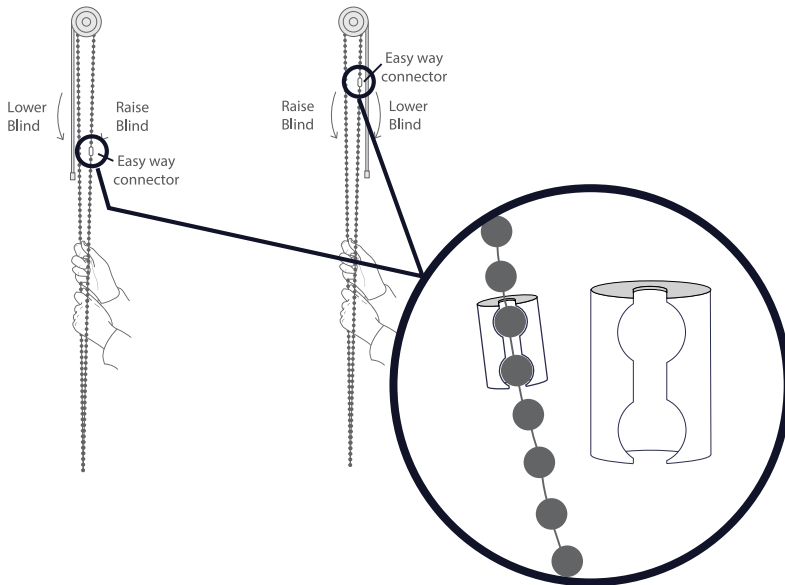

WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of reach of young children. Cords may become wrapped around a child's neck.

Move beds, cots and furniture away from window covering cords.

Do not tie cord together. Make sure cords do not twist and create a loop.